

ACM-4000 Installation And Operation Manual

DE-4000 Series Configurable Safety Shutdown and Control System

Form DE-4000 OCM 02-22



This manual contains information on the operation and configuration of a DE-4000 Safety Shutdown and Control System. This manual supplements the DE-4000 Safety Shutdown and Control System Installation Instructions, Form DE-4000 II.

Table of Contents

- ACM-4000 Installation And Operation Manual** 1
- OVERVIEW** 1
- AFR-500** 2
- DUAL BANK 2

ACM-4000 Installation And Operation Manual



OVERVIEW

The Altronic Compute Module - 4000 (ACM-4000) is a device used for connectivity, graphical displays, and high end computational power. It provides a flexible path to meet the demands of many applications.

- 24V Nominal Power
- 3 Ethernet Ports
- 2 HDMI Connectors
- 2 USB C
- 2 USB A
- 4 Isolated Relay Outputs
- 4 Digital Inputs

AFR-500

For full AFR-500 documentation this information can be found at [AFR-500 Documentation](#)

DUAL BANK

With an ACM-4000 mounted all that is required to use the ACM is input power to the board, and to connect the ethernet ports of each AFR-500 board to any of the three ethernet ports on the ACM-4000. If using a display, connect an HDMI cable from either of the HDMI ports on the ACM-4000 to the HDMI port of the display. When the display is also a touch screen connect a USB cable from any of the USB ports on the ACM-4000 to the USB port of the touch screen display.

From:
<https://www.altronic.a2hosted.com/> - **Documentation Wiki**

Permanent link:
<https://www.altronic.a2hosted.com/doku.php?id=documents:acm-4000&rev=1649423412>

Last update: **2022/04/08 09:10**

