DE-4000 SCRIPTING REFERENCE MANUAL

DE-4000 Series Configurable Safety Shutdown and Control System

Form DE-4000 OCM 02-22

altronic



All rights reserved © ALTRONIC, LLC 2022

This manual contains information on the operation and configuration of a DE-4000 Safety Shutdown and Control System. This manual supplements the DE-4000 Safety Shutdown and Control System Installation Instructions, Form DE-4000 II.

All rights reserved © ALTRONIC, LLC 2022

Table of Contents

1. Begin on Dashboard on DE-4000 system environment 1
2. Choose “Global” from menu on left side of screen 2
3. In the Sub-Menu on the Left side select “Scripts” 2
4. 3
5. 3
DE4000 Lua Script API 3

All rights reserved © ALTRONIC, LLC 2022

All rights reserved © ALTRONIC, LLC 2022

DE-4000 SCRIPTING REFERENCE MANUAL

One overarching capability that allows a bridge to gap the standard needs of everyday systems and the customer needs of innovation is scripting. A scripting language, cleverly named Lua, is embedded into the DE-4000 system. It operates as a script mainly meaning that it does not need additional tools to convert the “code” into machine language. It also is looked at and corrected for errors every time the script runs. Therefore it is an “interpreted” language and runs all of the time when you ask it. Lua comes with a background of being robust, fast, and geared towards embedded applications, with a proven track record in the gaming industry. For the DE-4000 system it is small and fits in the memory we have available, holds a lot of power, and keeps it simple for writing in the language. All information regarding the Lua scripting language is located at https://Lua.org Using the Lua engine as an embedded tool allows for taking advantage of a full architecture and standard at your fingertips. Within the language there are all of the normal attributes to programming such as functions, variables, statements, expressions etc. All of this reference material can be found at https://lua.org/ manual/5.3/ For getting started and using a guided reference, there are several editions of “Programming in Lua” available. Most recent editions are a paid for product that come in paper back or ebook form. While testing out Lua and becoming familiar, a free first edition is available and covers a lot of learning needs to get comfortable with the language. It can be located at https://www.lua.org/pil/contents.html. A major advantage to using Lua is its inherent ability to allow custom functions. While all normal functions and calls are published, there is the ability to add new functions in the DE-4000 firmware. Once new functions are defined and have calls to their internal properties, they then can be published for the user. This includes functions such as our flexible Modbus table and talking with various terminal boards linked in the system. Below is the start to the list of Altronic based functions. As functionality and features come to life through new ideas, this document will continually get updated with the latest scripts that we make available.

GETTING STARTED WITH DE-4000 SCRIPTS Basic Scripting on DE-4000

1. Begin on Dashboard on DE-4000 system environment

All rights reserved © ALTRONIC, LLC 2022

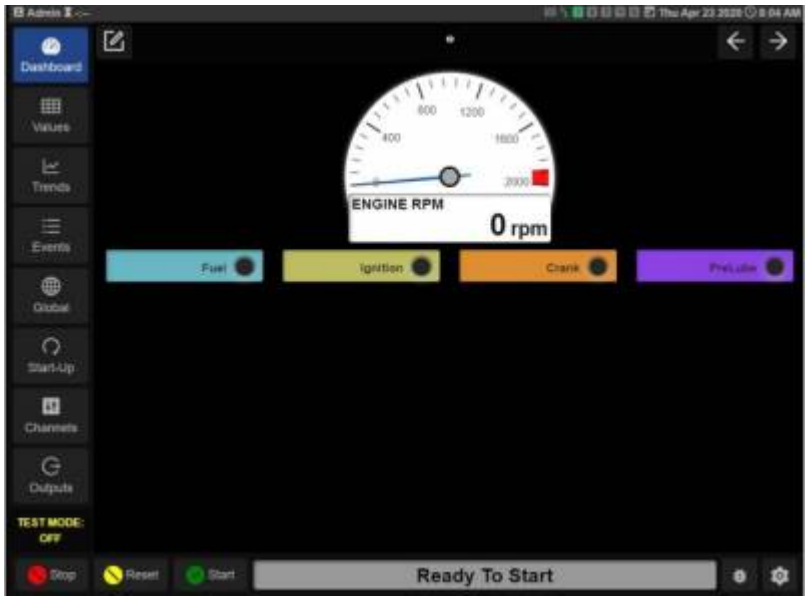

2. Choose “Global” from menu on left side of screen



3. In the Sub-Menu on the Left side select “Scripts”

All rights reserved © ALTRONIC, LLC 2022

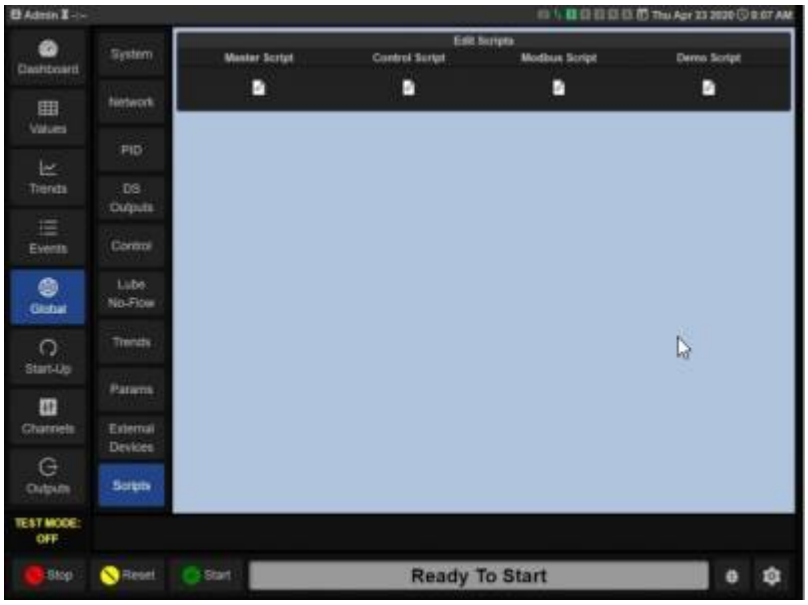

4.

Select one of the page icons under one of the 4 script options to open editor

5.

Scripting can be entered into the editor.

DE4000 Lua Script API

---

create_param("index",default,"catergory","description")

- creates a user configurable parameter
- parameter is stored as `index`,
- default value(If not changed by user) is `default`
- parameters will be grouped on the Global/Params page by `category`
- `description` is text to describe the parameter to the user

Example:

```
create_param("NumEngCyl",8,"Engine Params","Num. of Engine Cylinders")
```


All rights reserved © ALTRONIC, LLC 2022

get_channel_val(terminal,channel)

- returns current value of analog input `channel` on terminal module `terminal`
- return value type is numeric

Example:

```
local sp = get_channel_val(1,5)
```

> reads value of Suction Pressure from Terminal Module #1 , Input #5

---

get_gbl("index",default)

- returns global config setting stored under `index` or returns `default` if not defined

> **note:** get_gbl is used to retrieve global CONFIGURATION settings that are typically set when the system is configured and do not change as the system is running. If you want to set and retrieve global STATUS variables use the get_sGbl() and set_sGbl() functions >If you want to create and read virtual channels use the set_sVirt() and get_sVirt() functions.

Example:

```
local nt = get_gbl("NumTerm",1)
```

> gets the number of terminal boards installed in the system

---

get_param("index")

- return either the default value or the user configured value of the parameter `index`

Example:

```
get_param("NumEngCyl")
```

>gets the configured parameter for number of engine cylinders

All rights reserved © ALTRONIC, LLC 2022

get_rpm(channel)

- reads the RPM input `channel` in units of revolutions per minute

> **note:** valid channel numbers are 1 - 10(2 channels per board, up to 5 terminal boards)

Each Terminal Module has 2 RPM inputs (RPM1 and RPM2)

- Terminal Module **#1** RPM channels are **1,2**
- Terminal Module **#2** RPM channels are **3,4**
- Terminal Module **#3** RPM channels are **5,6**
- Terminal Module **#4** RPM channels are **7,8**
- Terminal Module **#5** RPM channels are **9,10**

Example:

```
local engineRPM = get_rpm(1)
local turboRPM = get_rpm(6)
```

> Read RPM1 channel from terminal module #1 and read RPM2 channel from Terminal module #3

---

get_sGbl("index", default)

- If `index` is defined in the global status table then it returns the value associated with `index`
- If `index` is not defined and optional `default` is provided then returns `default`

>**note:** It is recommended to always provide a default value when using this function

Example:

```
local cp = get_sGbl("calculatedPressure",0)
```

> get the previously stored value "calculatedPressure", Returns `0` if not found.

---

get_state()

- returns the current engine state(possible values currently 0 - 10)

All rights reserved © ALTRONIC, LLC 2022

Example:

```
local engineState = get_state()
if engineState > 7 then
    set_timer("WarmupTimer",1000)
end
```

---

get_sVirt("index")

- returns the value of virtual channel `index` or returns `default` if the virtual channel does not exist.

Example:

```
local tl = get_sGbl("timeLimit")
local et = get_sVirt("ElapsedTime",0)
if et > tl then
    set_sGbl("timeExceeded",true)
else
    set_sGbl("timeExceeded",false)
end
```

>Gets the value of virtual channel ElapsedTime and set value of status global "timeExceeded" if ElapsedTime is greater than status global "timeLimit"

---

get_time()

- returns the UNIX "epoch" time (Defined as the number of seconds elapsed since Jan 1, 1970)

Example:

```
local startTime = get_sGbl("startTime",0)
if startTime == 0 then
    local currentTime = get_time()
    startTime = currentTime
    set_sGbl("startTime",currentTime)
end
local et = get_time() - startTime
set_sVirt("ElapsedTime",et)
```

>Stores current time if first time through, otherwise calculate elapsed time

All rights reserved © ALTRONIC, LLC 2022

get_timer("index")

- returns 1 or 2 values
- First return value(Boolean) is **true** if timer is active(counting down) or **false** if timer is expired or has not been set yet
- Second return value is the number of seconds remaining or **-1** if timer is not active or has not been set yet

Example:

```
if not get_timer("myTimer") then
    set_sGbl("timedOut",true)
else
    set_sGbl("timedOut",false)
end
```

> if timer is expired, then set global status "timedOut" to **true**

```
local active,remaining = get_timer("myTimer")
if not active then
    set_sVirt("timeRemaining","Expired")
else
    set_sVirt("timeRemaining",remaining)
end
```

---

getStateLabel(state)

- return the label for the engine state corresponding to the parameter `state`

Example:

```
local stateLabel = getStateLabel(get_state())
local active, remaining = get_timer("myTimer")
if remaining > 0 then
    stateLabel == StateLabel.." "..remaining
end
set_sVirt("Countdown",stateLabel)
```

All rights reserved © ALTRONIC, LLC 2022

set_sGbl("index",value)

- store `value` in the global status table under `index`
- value can be a number or string but if storing a boolean use the **tostring()** function

Example:

```
local mpe = false
local sp = get_channel_val(1,5)
if sp > 15 then
    mpe = true
end
set_sGbl("minPressureExceeded",tostring(mpe))
```

> store boolean value **minPressureExceeded**

---

set_sVirt("index",value)

- sets a virtual status channel with channel name `index`

> **Note:** Once you create a virtual channel, you can add that channel to the dashboard using the channel name `index`

Example:

```
local sp = get_channel_val(1,5) --suction pressure
local dp = get_channel_val(1,6) --discharge pressure
local diffPress = dp - sp
set_sVirt("SuctDischDiff",diffPress)
```

> calculate the differential between suction and discharge pressure and assign to virtual channel

---

set_timer("index",secs)

- activate timer `index` and set countdown time to `secs`

Example:

```
set_timer("myTimer",300)
```


All rights reserved © ALTRONIC, LLC 2022

> create timer `myTimer` and start countdown time to 300 seconds

From:
https://www.altronic.a2hosted.com/ - **Documentation Wiki**

Permanent link:
https://www.altronic.a2hosted.com/doku.php?id=documents:de4000:de4000script&rev=1643059541

Last update: **2022/01/24 21:25**

All rights reserved © ALTRONIC, LLC 2022